



**SCHEMATIC WIRING DIAGRAM
COMFORT PACK GAS
A or B SERIES R22**

SERVICE MANUAL EDITION - 5/3/2022

- | | | |
|-------------------------------|----------------------------|------------------------|
| CAP - DUAL CAPACITOR | FS - FLAME SENSOR | SF - SMART FAN CONTROL |
| CB - CONTROL BOARD | GV - GAS VALVE | SI - SPARK IGNITOR |
| CBR - COOLING BLOWER RELAY | HBR - HEATING BLOWER RELAY | TB - TERMINAL BOARD |
| CC - COMPRESSOR CONTACTOR | HL - HIGH LIMIT SWITCH | XFMR - TRANSFORMER |
| CFM - CONDENSER FAN MOTOR | IND - INDUCER MOTOR | |
| COMP - COMPRESSOR | LPS - LOW PRESSURE SWITCH | |
| DS - DOOR SWITCH | PS - PRESSURE SWITCH | |
| EBM - EVAPORATOR BLOWER MOTOR | RO - ROLLOUT SWITCH | |