

# Heating Comfort for Multi-Family Construction

# **Installation Guide**

# Electric Heat Kit for use in M-Series Air Handler

This unit is designed to be installed with

**NCPAH** 

Series:

24-M

36-M

Please read the entire installation guide before starting the installation. All phases of this installation must comply with National, State and Local codes.

#### ATTENTION INSTALLING PERSONNEL

Prior to installation, thoroughly familiarize yourself with this Installation Manual. Observe all safety warnings. During installation or repair, caution is to be observed. It is your responsibility to install the product safely and to educate the customer on its safe use.

#### **CAUTION**

- ENSURE THAT ALL POWER IS CONNECTED PRIOR TO ATTEMPTING INSTALLATION OF THIS HEATER KIT. THERE MAY BE MORE THAN ONE DISCONNECT SERVICING THE UNIT.
- A MEANS OF STRAIN RELIEF AND CONDUCTOR PROTECTION MUST BE PROVIDED AT THE SUPPLY WIRE ENTRANCE INTO CABINET.
- USE COPPER CONDUCTORS ONLY.
- INSTALLATION MUST FOLLOW NATIONAL ELECTRIC CODE AND OTHER APPLICABLE CODES.

IF THIS APPLIANCE IS INSTALLED IN AN ENCLOSED AREA SUCH AS A GARAGE OR UTILITY ROOM WITH ANY CARBON MONOXIDE PRODUCING APPLIANCE, ENSURE THE AREA IS PROPERLY VENTILATED.


**Important:** This Document is customer property and is to remain with this unit.

DO NOT DESTROY OR THROW AWAY THIS MANUAL.
IT SHOULD BE KEPT IN A SAFE PLACE FOR FUTURE REFERENCE.

**1.** Remove the upper access panel from the air handler.




**2.** Remove the cover plate from the air handler.

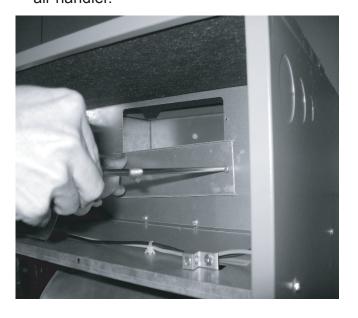


**3.** Slide the heater kit into the slot and secure element plate with previously removed screws.



**4.** Align the attachment clip and the hole and fasten the loose wires by using wore tie.

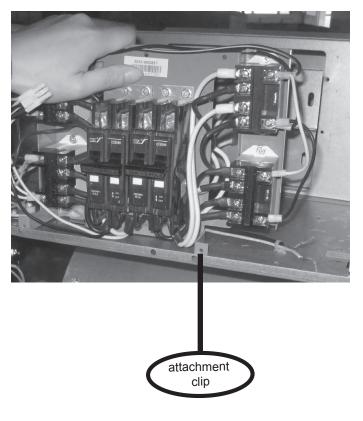

**5.** Install the circuit breaker into the mounting rail, break out appropriate area of the plastic circuit breaker cover on the access panel of the air handler.

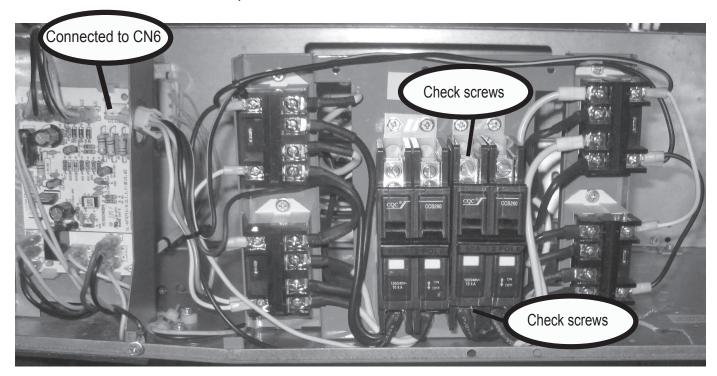



# FIRE, ELECTRICAL SHOCK, HAZARD

After connect all wires, check all screws of breaker and make sure all screws are properly tight. Failure to do so will result in breaker malfunction, fire, death, personal injure or property damage.

#### "EHK" Electric Heater Kits

NO.	Kit#	Description	Ref. Air Handler use			
1	EHK05A(UL)	5kW Heat Strip	24, 36			
2	EHK08A(UL)	7.5kW Heat Strip	24, 36			
3	EHK10A(UL)	10kW Heat Strip	24, 36			
4	EHK15B(UL)	15kW Heat Strip, Double Breaker's panel	36			
5	EHK20B(UL)	20kW Heat Strip, Double Breaker's panel	36			


#### NOTE:

- When indoor control board receives W1/W2 signal, electric heater will be energized and indoor blower will be turned on.
- When W1/W2 signal is off, indoor blower will be turned off after 90 seconds delay.
- Blower motor runs when "G" is energized, and a 90s off delay when "G" is de-energized.

# "EHK" MCA/MOP DATA

Heat Kit Model	Air Handler Model	(kW)Electric Heat	MIN. Circuit Ampacity		MAX.Fuse or Breaker (HACR) Ampacity		Fan speed (AC/HP)		
			240	208	240	208	Low	Medium	High
EHK05A(UL)		5	26	23	30	25	•	•	•
EHK08A(UL)	24	7.5	39	34	45	40	•	•	•
EHK10A(UL)		10	52	45	60	50		•	•
EHK05A(UL)	36	5	26	23	30	25	•	•	•
EHK08A(UL)		7.5	39	34	45	40	•	•	•
EHK10A(UL)		10	52	45	60	50	•	•	•
EHK15B(UL)		15	78	68	90	80		•	•
EHK20B(UL)		20	104	90	110	100			•

<sup>\*</sup> Heat kit suitable for AHU 4-way position installation ( • means available, -- means not available).

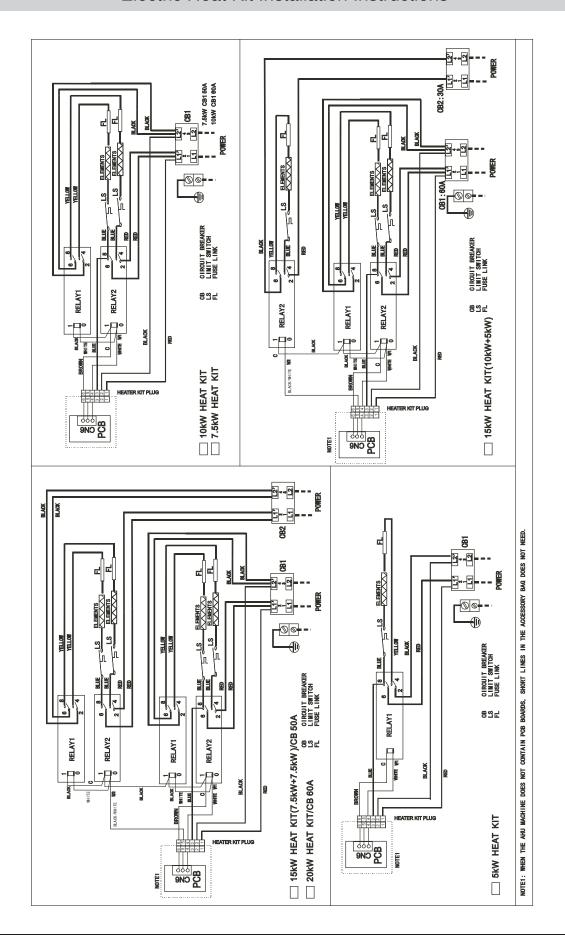



#### **National Comfort Products**

539 Dunksferry Road | Bensalem, PA 19020-5908 (800) 523-7138 Fax (215) 638-1674