




Thru-the-Wall Comfort for all types of Multi-Family Construction

Assembly Instructions

Wall Sleeve Adapter

This unit should be installed in an **OUTSIDE WALL** for **THRU-THE-WALL INSTALLATION ONLY!**

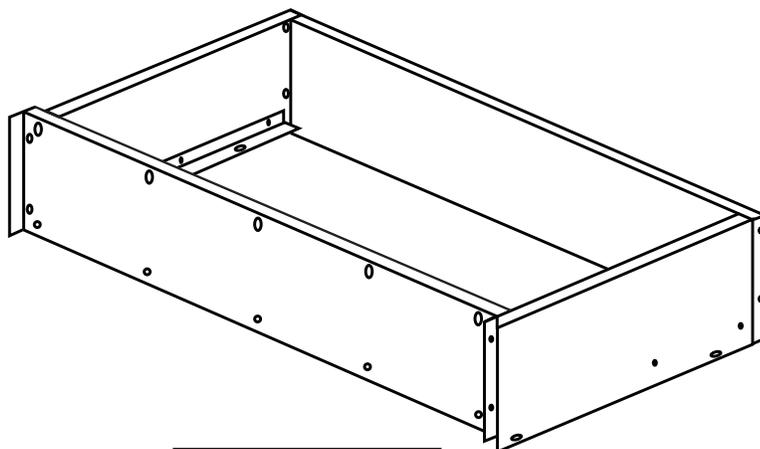

*Read Installation Manual prior to starting the installation.
This manual must be left with the homeowner for future reference.*

Go Thru-the-Wall




National Comfort Products
A Division of National Refrigeration and Air Conditioning Products, Inc.
539 Dunksferry Road • Bensalem, PA 19020-5908
(800) 523-7138 • Fax (215) 639-1674
www.nationalcomfortproducts.com

Assembly Instructions for Comfort Pack Wall Sleeve Adapter (CPWSA)

Wall Sleeve Adapter (CPWSA) Assembly Instructions

ITEM	DESCRIPTION	PART NO.	QUANTITY
1	Front Panel	14256135	1
2	Rear Panel	14256134	1
3	Left Panel	14256136	1
4	Right Panel	14256137	1
5	Side Panel Angle	14256139	2
6	#10 x 1/2 Hex Screw	14295007	12
7	1/2" Thick Insulation	14231002	1

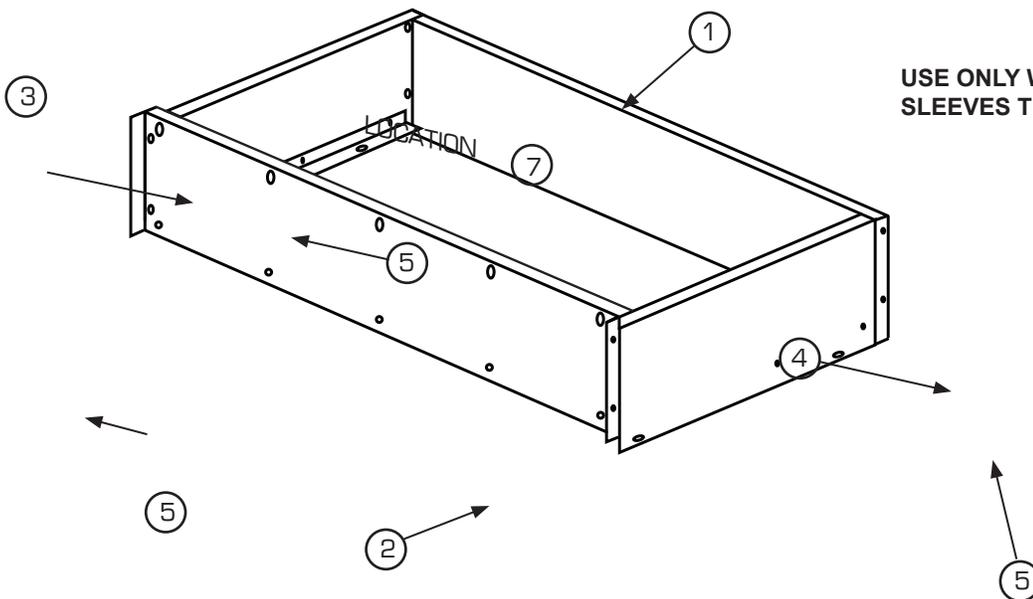


USE ONLY WITH EXISTING WALL SLEEVES THAT ARE 48" HIGH.

CAUTION: ALWAYS WEAR SAFETY GLASSES WHEN WORKING WITH TOOLS! OVER-TIGHTENING THE SCREWS MAY STRIP THE RETAINING HOLES. READ ALL OF THE ASSEMBLY INSTRUCTIONS STEPS BEFORE PROCEEDING.

- Identify ALL of the parts shown in the parts list. If any parts are missing, notify the factory for replacement(s).
- Position the side panel angle (5) inside the left panel (3) in the position shown and secure with two screws (6).
- Position the side panel angle (5) inside the right panel (4) in the position shown and secure with two screws (6).
- Position the right panel (4) with the slots down inside the right end of the insulated side of the front panel (1) as shown and secure with two screws (6).
- Position the left panel (3) with the slots down inside the left end of the insulated side of the front panel (1) as shown and secure with two screws (6).
- Position the rear panel (2) with the five elongated holes on top as shown and attach it to the left panel (3) and right panel (4) with four screws (6).
- On the Comfort Pack unit, remove two screws from the left side of the top panel flange starting at the front (outside). Also remove two screws from the right side of the top panel flange starting at the front (outside).
- Position the Wall Sleeve Adapter on top of the Comfort Pack unit so that the bottom flanges on the front (outside) and both side panels go over the edges of the top of the unit. The rear panel of the Wall Sleeve Adapter should be on the outside surface of the top angle on the Comfort Pack unit.
- Secure the Wall Sleeve Adapter to the Comfort Pack unit by installing the screws removed from the top panel in **Step 7** through the slotted holes in side panels of the Wall Sleeve Adapter into the top panel of the unit.
- Using the enclosed 5/16" bolts, flat washers and nuts, install one washer on each bolt and insert the bolt through the top angle of the Comfort Pack unit into the Wall Sleeve Adapter. Install one nut per bolt on the inside of the Wall Sleeve Adapter and tighten the five bolts.
- Install the Comfort Pack with Wall Sleeve Adapter into the Wall Sleeve.

Assembly Instructions for Comfort Pack Wall Sleeve Adapter (CPWSA)

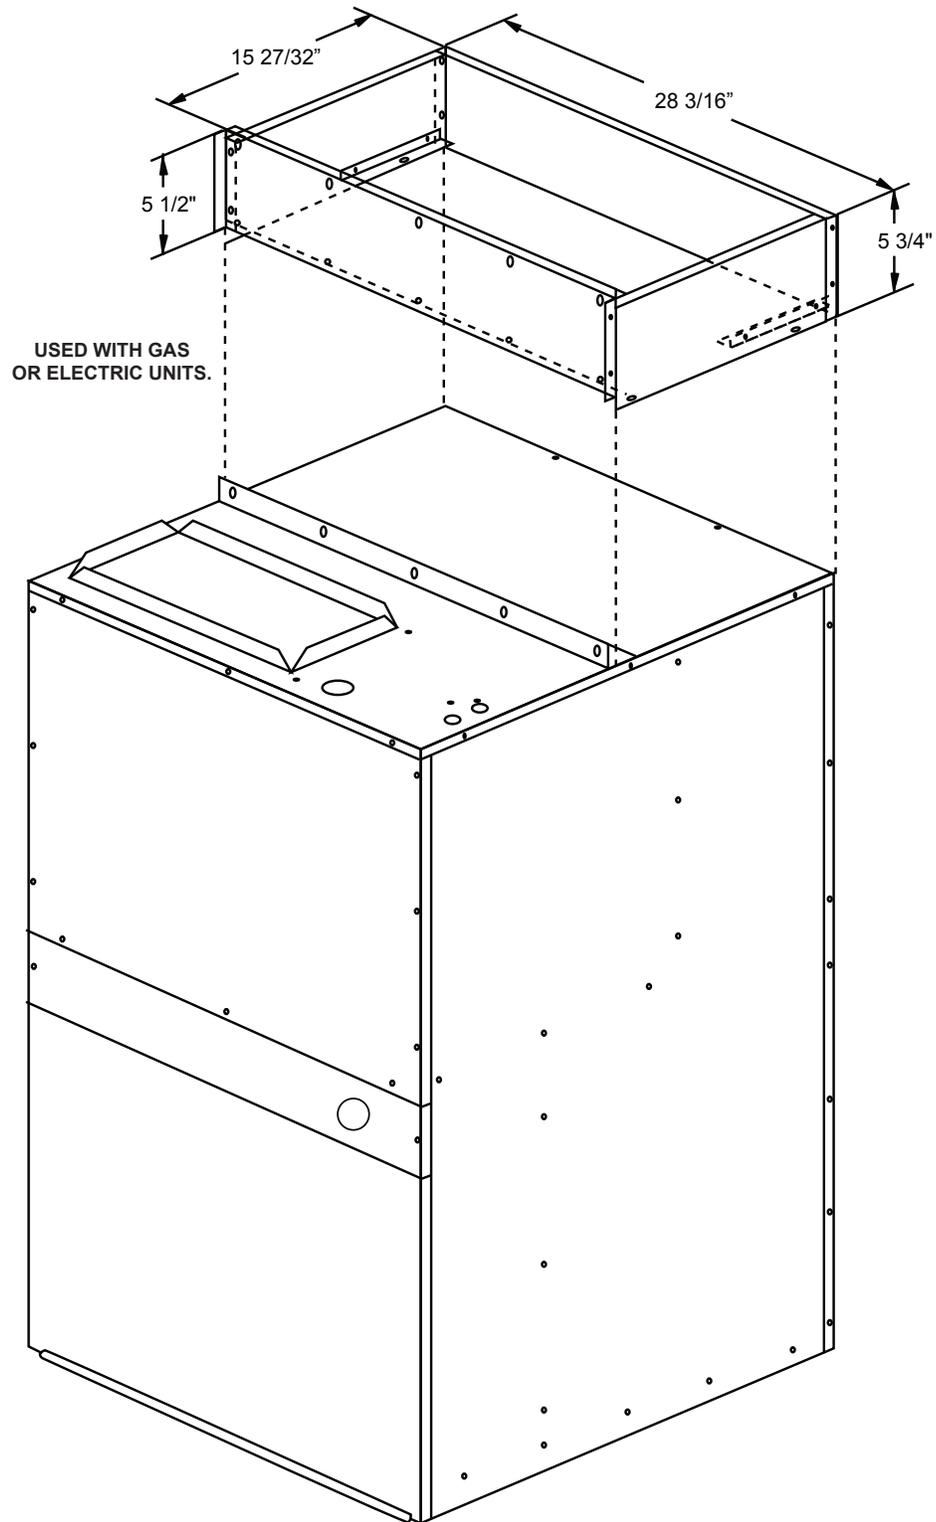



HEATING & A/C EQUIPMENT

National Comfort Products

539 Dunksferry Road | Bensalem, PA 19020-5908

(800) 523-7138

Fax (215) 639-1674

www.NationalComfortProducts.com